


















































P100 Exploded View

Layout diagram 布局图	Exploded View 爆炸图	Location 位置	No. 序号	Part num 物料编码	Part name 物料名称	Photo 照片	Screw num 螺丝编码	Screw Specification 螺丝规格	Qty 数量
		Fuselage front compartment 框架结构 头部	1	05-002-01371	P100 Front Hood (Chinese Version) P100 机头罩(中国版)				
			1	05-002-01634	P100 Front Hood (International Version) P100 机头罩(海外版)				
			2	02-001-07970	P100 Antenna Cable Organizer P100 天线卡线架		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
			3	02-001-08076	P100 Front Hood Rack P100 头罩固定管		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
			4	02-001-07397	P100 Front Hood Clip (Rear) P100 P100 机头罩固定管卡件-后		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
			5	02-001-08155	P100 Front Cable Organizer (Large) P100 头罩卡线件		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	2
			6	02-001-08157	P100 Fuselage Front Compartment Frame P100 头罩框架		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	8
			7	02-001-08239	P100 Front Cable Organizer (Small) P100 机头卡线件				
			8	02-001-07399	P100 Front Hood Clip (Front) P100 P100 机头罩固定管卡件-前		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	1
			10	02-001-07999	P100 Front Rack Bracket (Left) P100 机头支撑固定件-左		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	3
			11	02-002-09969	P100 Front Rack P100 机头红色支撑杆				
			12	14-005-00005	P30,XP,P40,V40CN,V40EN,P100 Optical Flow Lens Shade P30,XP,P40,V40CN,V40EN,P100 地形模块防尘盖				
			13	02-001-08154	P100 Dynamic Radar Bracket P100 摇摆雷达固定件		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	8
			14	02-001-08000	P100 Front Rack Bracket (Right) P100 机头支撑固定件-右		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	3
		Arm 1/2 框架结构 1/2号机臂	1	02-001-07248	P100 Arm Rubber Protector Bracket P100 机臂防撞胶压件		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4
			2	02-001-08242	P100 Arm Rubber Protector P100 机臂防撞胶				
			3	14-005-00023	P100 Motor Connector Bracket P100 电调端子固定座		02-004-00775	ST4.0*16 Tapping Screw ST4.0x16内六角圆柱头自攻螺丝	2
			4	02-001-08187	V40CN,V40EN,P100 Motor/Servo Bracket Pin Buffer V40CN,V40EN,P100 电机座减震胶套				
			5	02-002-10353	V40CN,V40EN,P100 Motor/Servo Bracket Pin V40CN,V40EN,P100 电机座铜套				
			6	02-001-07674	P100 Arm Rubber Protector Support P100 机臂软胶支撑		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
			7	02-001-07349	P100 Motor Bracket P100 电机座		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	6
			8	02-002-07249	P100 Arm Clamp P100 机臂管夹		02-004-00780	M5*32*10 Screw Kit M5*32内六角三组合前落螺丝	2
			9	02-001-06306	P100 Fuselage Arm Cover P100 机臂机身端旋转件				
			10	02-003-00651	P100 Arm P100 机臂				
			11	02-001-07628	P100 Motor Connector Isolator (Thick) P100 电调端子支撑管 2 (长)				
			12	02-001-07627	P100 Motor Connector Isolator (Thin) P100 电调端子支撑管 1 (短)				
			13	02-001-08203	P100 Motor Connector Housing P100 电调端子保护盖		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
		Arm 3 框架结构 3号机臂	1	02-001-08133	V40EN,P100 Nozzle Extension Rod Release Knob V40EN,P100 喷头快拆按键				
			2	02-001-07674	P100 Arm Rubber Protector Support P100 机臂软胶支撑		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
			3	02-001-08187	V40CN,V40EN,P100 Motor/Servo Bracket Pin Buffer V40CN,V40EN,P100 电机座减震胶套				
			4	02-002-10353	V40CN,V40EN,P100 Motor/Servo Bracket Pin V40CN,V40EN,P100 电机座铜套				
			5	14-005-00041	P100 Nozzle Extension Rod Bracket (Left) P100 左喷杆固定件		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	4
			6	14-005-00023	P100 Motor Connector Bracket P100 电调端子固定座		02-004-00775	ST4.0*16 Tapping Screw ST4.0x16内六角圆柱头自攻螺丝	2
			7	02-001-07248	P100 Arm Rubber Protector Bracket P100 机臂防撞胶压件		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4
			8	02-001-08242	P100 Arm Rubber Protector P100 机臂防撞胶				
			9	02-001-08203	P100 Motor Connector Housing P100 电调端子保护盖		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
			10	02-001-07627	P100 Motor Connector Isolator (Thin) P100 电调端子支撑管 1 (短)				
			11	02-001-07628	P100 Motor Connector Isolator (Thick) P100 电调端子支撑管 2 (长)				
			12	02-001-08136	V40EN,P100 Nozzle Extension Rod Access Port Cover V40EN,P100 喷头加长杆维修盖				
			13	02-001-08300	V40EN,P100 Solenoid Valve Bracket V40EN,P100 电磁阀固定件		02-004-00523	M2.5*8*4.5 Screw Kit M2.5*8*4.5内六角圆柱头三组合前落螺丝	
			14	02-001-08310	V40EN,P100 Nozzle Extension Rod V40EN,P100 喷头加长杆				
			15	02-001-08314	V40EN,P100 Nozzle Extension Rod Inner Foam Protector (Thick) V40EN,P100 喷头EVA棉-B				
			16	02-001-08197	V40EN,P100 Nozzle Extension Rod Inner Foam Protector (Patch-Type) V40EN,P100 喷头片状EVA棉				
			17	02-001-08134	V40EN,P100 Nozzle Extension Rod Screw Mount V40EN,P100 喷头快拆卡件				


 	<p>Arm 4 框架结构 4号机臂</p>	18	02-001-08407	V40EN,P100 Nozzle Extension Rod Joint Cap V40EN,P100 喷头快拆红盖						
		19	02-001-07712	P100 Arm End Tube & Cable Protector P100 机臂传输管防磨橡胶						
		20	02-001-08163	V40EN,P100 L-Type Tube Fitting (for Arms) V40EN,P100 喷头弯管						
		21	02-002-10150	V40EN,P100 Nozzle Extension Rod Joint Spring V40EN,P100 喷杆快拆弹簧						
		22	02-002-07249	P100 Arm Clamp P100 机臂管夹		02-004-00780	M5*32*10 Screw Kit M5*32内六角三组合前落螺丝	2		
		23	02-003-00651	P100 Arm P100 机臂						
		24	02-001-06306	P100 Fuselage Arm Cover P100 机臂机身端旋转件						
		1	02-002-10353	V40CN,V40EN,P100 Motor/Servo Bracket Pin V40CN,V40EN,P100 电机座铆套						
		2	02-001-08187	V40CN,V40EN,P100 Motor/Servo Bracket Pin Buffer V40CN,V40EN,P100 电机座减震胶套						
		3	02-001-08407	V40EN,P100 Nozzle Extension Rod Joint Cap V40EN,P100 喷头快拆红盖						
		4	02-001-07712	P100 Arm End Tube & Cable Protector P100 机臂传输管防磨橡胶						
		5	02-001-07674	P100 Arm Rubber Protector Support P100 机臂橡胶支撑		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2		
		6	02-001-08242	P100 Arm Rubber Protector P100 机臂防撞胶						
		7	02-001-07248	P100 Arm Rubber Protector Bracket P100 机臂防撞胶压件		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4		
		8	02-001-08203	P100 Motor Connector Housing P100 电调端子保护盖		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2		
		9	14-005-00023	P100 Motor Connector Bracket P100 电调端子固定座		02-004-00775	ST4.0*16 Tapping Screw ST4.0*16内六角圆柱头自攻螺丝	2		
10	02-001-07627	P100 Motor Connector Isolator (Thin) P100 电调端子支撑管 1 (短)								
11	02-001-07628	P100 Motor Connector Isolator (Thick) P100 电调端子支撑管 2 (长)								
12	02-001-08197	V40EN,P100 Nozzle Extension Rod Inner Foam Protector (Patch-Type) V40EN,P100 喷头EVA棉-B								
13	02-001-08314	V40EN,P100 Nozzle Extension Rod Inner Foam Protector (Thick) V40EN,P100 喷头EVA棉-B								
14	02-001-08300	V40EN,P100 Solenoid Valve Bracket V40EN,P100 电磁阀固定件		02-004-00523	M2.5*8*4.5 Screw Kit M2.5*8*4.5内六角圆柱头三组合前落螺丝					
15	02-001-08310	V40EN,P100 Nozzle Extension Rod V40EN,P100 喷头加长杆								
16	02-001-08136	V40EN,P100 Nozzle Extension Rod Access Port Cover V40EN,P100 喷头加长杆维修盖								
17	14-005-00042	P100 Nozzle Extension Rod Bracket (Right) P100 右喷杆固定件		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	4				
18	02-001-08133	V40EN,P100 Nozzle Extension Rod Release Knob V40EN,P100 喷头快拆按键								
19	02-002-10150	V40EN,P100 Nozzle Extension Rod Joint Spring V40EN,P100 喷杆快拆弹簧								
20	02-001-08134	V40EN,P100 Nozzle Extension Rod Screw Mount V40EN,P100 喷头快拆卡件								
21	02-001-08163	V40EN,P100 L-Type Tube Fitting (for Arms) V40EN,P100 喷头弯管								
22	02-003-00651	P100 Arm P100 机臂								
23	02-001-06306	P100 Fuselage Arm Cover P100 机臂机身端旋转件								
24	02-002-07249	P100 Arm Clamp P100 机臂管夹		02-004-00780	M5*32*10 Screw Kit M5*32内六角三组合前落螺丝	2				
25	02-001-07349	P100 Motor Bracket P100 电机座								
 	<p>Fuselage 框架结构 中部</p>	1	02-001-07518	P100 Fuselage Handle 4G Antenna Bracket (Type A) P100 把手天线口盖1						
		2	02-002-09456	P100 U-Type Hook P100 悬挂固定挂钩		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	2		
		3	02-001-07657	P100 Fuselage Side Panel P100 天线遮盖板		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	2		
		4	02-002-09829	P100 Application System Releasable Hook Pin P100 快拆把手转轴						
		5	02-001-07658	P100 RTK & Radio Antenna Bracket P100 天线支架		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	2		
		6	14-005-00021	P100 Main Fuselage P100 边梁(含卡簧)		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	7		
		7	01-027-02338	P100 Application System Main Connect Cable P100 负载线						
		8	02-002-09897	P100 Main Fuselage Beam P100 横梁						
		9	02-001-08156	P100 Central Hood P100 中心舱盖		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	4		
		10	02-001-07519	P100 Fuselage Handle 4G Antenna Bracket (Type B) P100 把手天线口盖2						
		11	02-001-07517	P100 Fuselage Handle P100 机身把手		02-004-01053	M6*22*12 Screw Kit M6*22*12内六角圆柱头三组合前落螺丝	2		
		12	02-001-07520	P100 Fuselage Handle 4G Antenna Bracket Cable Clip P100 4G天线压盖		02-004-00531	M2.5*6*4.5 Screw Kit M2.5*6*4.5内六角圆柱头三组合前落螺丝	2		
		13	14-005-00026	P100 Application System Releasable Hook P100 快拆搭扣(含卡簧)						
		14	14-005-00022	P100 Application System Releasable Hook Bracket P100 搭扣底座(含卡簧)		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	4		

			15	02-001-08483	P100 Fuselage Bottom Shield P100 机身部分底部挡板				
			16	02-001-07990	P100 Application System Mount P100 机身载荷对接件		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	4
			17	02-001-07622	P100 Application System Mount Rubber Buffer P100 机身载荷对接件软胶				
			18	02-001-07991	P100 Fuselage Tube Protector (Ø20 Ring - Type) P100 药管固定橡胶				
			19	02-007-00200	P100 Main Fuselage Interior Foam Protector P100 主体框架防摩擦棉				
			20	02-001-07644	P100 Central Power Busbar Seal P100 汇流板O型圈				
			21	02-001-07678	P100 Central Power Busbar Screw Dust Proof Cover P100 汇流板螺钉胶套				
			22	02-001-07640	P100 Fuselage Beam Cable Organizer P100 主体连接铝型材护套件				
			23	02-001-08289	P100 Fuselage Bottom Cable & Tube Organizer P100 机身端药管固定件		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	2
		Tail frame 框架结构 尾框	1	02-001-08009	P100 Battery Socket Upper Housing P100 电池尾插上壳		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	4
			2	02-002-09098	P100 Tail Frame Beam P100 尾框横梁		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	8
			3	14-005-00006	V40CN,V40EN,P100 Battery Guide Kit (incl Rubber Buffers) V40CN,V40EN,P100 电池导轨组件		02-004-00994	M4*12 Countersunk Screw M4*12内六角沉头螺丝 (剂落)	2
			4	02-001-08078	V40EN,P100 Battery Guide Rubber Buffer V40EN,P100 电池导轨胶垫				
			5	02-001-08194	P100 Tail Frame P100 电池尾框		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	8
			6	02-001-08462	P100 Battery Socket Lower Housing P100 电池尾插下壳		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	4
		RevoCast 睿播系统 主体	1	02-001-08110	P100 Application System Cable Organizer P100 负载连接接头卡件		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
			2	02-001-08108	P100 Application System Cable Clip P100 负载框线扣		02-004-00890	ST2.9*10 Tapping Screw ST2.9*10 PB内六角平圆头自攻螺丝	1
			3	02-001-07952	P100 Application System Upper Frame Screw Destproof Cover P100 负载框胶套				
			4	02-001-08241	P100 Application System Cable Organizer (Patch-Type) P100 负载框线束固定件		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
			5	02-001-08322	P100 Application System Upper Frame P100 负载主框		02-004-00939	M5*16*10 Screw Kit M5*16*10六角圆柱头三组合前落螺丝	8
			6	02-001-08070	P100 Application System Cable Hub Upper Case P100 负载集线板上盖		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
			7	02-002-10143	P100 Landing Skid (for Granule Container, Left) P100 料箱脚架左				
			8	02-001-08049	P100 Landing Skid Bottom Rod Bracket Clamp P100 药箱脚架外圆固定件		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	4
			9	02-001-08111	P100 Application System Cable Hub Case Seal P100 负载集线盒防水橡胶圈				
			10	05-002-01310	P100 Application System Cable Hub Board P100 负载集线板PCBA		02-004-00889	ST2.9*5 Tapping Screw ST2.9X5PB内六角平圆头自攻螺丝	2
			11	02-001-08071	P100 Application System Cable Hub Lower Case P100 负载集线板下盖		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	6
			12	02-001-08200	P100 Small Cable Clip P100 睿播用盘电机线 R型理线夹		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	1
			13	02-001-08282	P100 Granule Container P100 料箱箱体				
			16	02-001-08234	P100 Granule Container Interior Bracket (Upper) P100 料箱箱体内部挂载件		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
17	02-001-08348	P100 Granule Container Lid P100 料箱盖							
18	14-005-00036	P100 Spreading System Main Harness P100 负载集线板睿播连接组件		02-004-01033 02-004-00890	M2*8*4 Screw Kit M2*8*4内六角三组合前落螺丝 ST2.9*10 Tapping Screw ST2.9X10PB内六角平圆头自攻螺丝 (A1)	4 2			
19	05-002-01380	P100 Granule Container Level Detector P100 料箱雷达		02-004-00936	M3*6*6 Screw Kit M3*6六角圆柱头三组合前落螺丝	3			
20	02-001-08413	P100 Application System Landing Skid Clamp P100 负载框脚架固定件		02-004-00995	M4*40*8 Screw Kit M4*40x8内六角圆柱头三组合前落螺丝	1			
22	02-002-10143	P100 Landing Skid (for Granule Container, Left) P100 料箱脚架左							
			1	02-001-08329	P100 Spreader Disc Casing Interior Flap (Right) P100 睿播出料口-右挡片		02-004-00763	ST4.2*10 Tapping Screw ST4.2*10PA内六角圆柱头尖脚自攻螺丝	2
			2	14-005-00031	P100 Spiral Feeder Motor (incl. Primary Gearbox) P100 蛟龙电机减速机		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合前落螺丝	4
			3	02-001-08330	P100 Spreader Disc Casing Interior Flap (Left) P100 睿播出料口-左挡片		02-004-00763	ST4.2*10 Tapping Screw ST4.2*10PA内六角圆柱头尖脚自攻螺丝	2
			4	14-005-00033	P100 Spreader Motor P100 甩盘电机		01-027-02200	P100 Spreader Motor Cable P100 甩盘电机线	
			5	02-001-08326	P100 Spreader Disc Casing (Outer, Left) P100 睿播甩盘电机左安装件		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	4
			6	14-005-00037	P100 Spiral Feeder (Large, left) P100 睿播大号蛟龙-左				
			7	02-001-08324	P100 Spreader Disc Casing (Inner, Left) P100 睿播蛟龙端-左甩盘安装件		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合前落螺丝	4
			8	02-001-08600	P100 Spreader Disc (Left) P100 睿播甩盘-左端				
			9	02-001-08331	P100 Spiral Feeder Casing P100 睿播蛟龙上料圆管		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合前落螺丝	3
			10	02-001-08068	P100 Spiral Feeder Motor Gear Shaft Seal P100 睿播蛟龙同步齿轮电机端中轴 O型硅胶圈				



RevoCast
睿播系统
播撒器















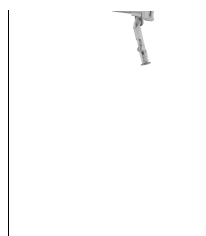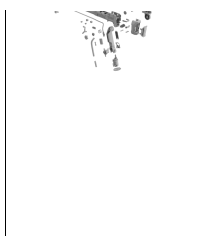


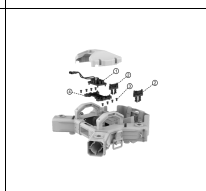


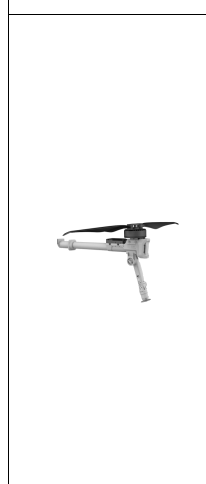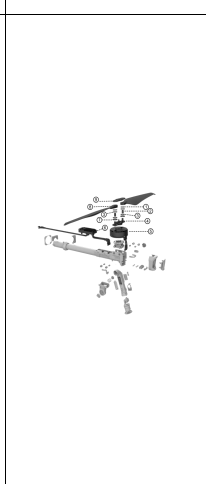


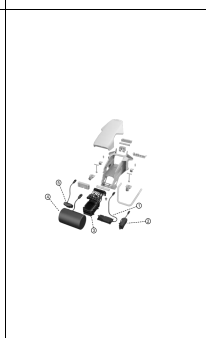














11	02-002-09700	P100 Spiral Feeder Gear Shaft Gasket P100 睿播同步齿轮轴锁紧件				
12	05-002-01389	P100 Spiral Feeder Casing Clamp P100 睿播蛟龙筒抱紧卡扣				
13	02-001-08199	P100 Spiral Feeder Motor Thermal Pad P100 睿播蛟龙电机散热硅胶				
14	02-002-09919	P100 Spiral Feeder Spline Coupling P100 睿播蛟龙对接轴				
15	02-002-10030	P100 Spiral Feeder Motor Housing P100 睿播蛟龙电机罩		02-004-00890	ST2.9*10 Tapping Screw ST2.9X10PB内六角圆柱头自攻螺丝 (A1)	4
16	02-002-09245	P100 Spiral Feeder Casing Clamp Pin P100 睿播蛟龙卡扣转轴				
17	02-002-09366	P100 Granule Container Bottom Radar Reflector P100 睿播雷达监测金属件		02-004-00890	ST2.9*10 Tapping Screw ST2.9X10PB内六角圆柱头自攻螺丝 (A1)	1
18	02-002-09700	P100 Spiral Feeder Gear Shaft Gasket P100 睿播同步齿轮轴锁紧件				
19	02-001-08287	P100 Spiral Feeder Foam Cable Holder P100 睿播蛟龙电机线卡线 EVA棉				
20	02-001-08229	P100 Spiral Feeder Transfer Case Outer Casing P100 睿播同步齿轮盖		02-004-00891	ST4.2*14 Tapping Screw ST4.2X14PB内六角圆柱头自攻螺丝	6
21	02-001-08334	P100 Spiral Feeder Main Frame P100 睿播播撒器主框		02-004-00747	M5*10*10 Screw Kit M5*10*10内六角圆柱头三组合耐落螺丝	8
22	02-001-08064	P100 Spiral Feeder Gear (Driven) P100 睿播蛟龙同步齿轮-蛟龙端		02-004-01031	M4x8 Screw M4x8 平头内六角耐落螺丝	1
23	02-001-08065	P100 Spiral Feeder Motor Gear (Driving) P100 睿播蛟龙同步齿轮-电机端		02-004-00834	M4*12*8 Screw Kit M4*12*8六角圆柱头三组合耐落螺丝	1
24	02-001-08496	P100 Spreader Disc Flange P100 睿播甩盘固定花键法兰盘				
25	02-001-07801	P100 Spiral Feeder Motor Interior Seal P100 蛟龙电机减速箱硅胶 O型圈				
26	02-001-08067	P100 Spiral Feeder Outlet End Pin Seal P100 睿播蛟龙中轴出料口 O型硅胶圈				
27	02-001-08323	P100 Spreader Disc Casing (Inner, Right) P100 睿播蛟龙-右甩盘安装件		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合耐落螺丝	4
28	02-001-08599	P100 Spreader Disc (Right) P100 睿播甩盘-右端				
29	14-005-00038	P100 Spiral Feeder (Large, right) P100 睿播大号蛟龙-右				
30	02-001-08325	P100 Spreader Disc Casing (Outer, Right) P100 睿播甩盘电机右安装件				
31	02-001-08200	P100 Small Cable Clip P100 睿播甩盘电机线 R型理线夹		02-004-00889	ST2.9*5 Tapping Screw ST2.9X5PB内六角圆柱头自攻螺丝	1
32	02-002-07545	Ø3.5 Circlip Ø3.5卡簧				



RevoSpray
睿喷系统
主体

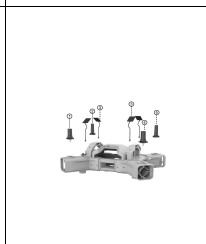1	02-001-08108	P100 Application System Cable Clip P100 负载框线扣		02-004-00890	ST2.9*10 Tapping Screw ST2.9X10PB内六角圆柱头自攻螺丝 (A1)	1
2	02-001-07952	P100 Application System Upper Frame Screw Destproof Cover P100 负载框胶塞				
3	02-001-08322	P100 Application System Upper Frame P100 负载主框				
4	02-001-08036	P100 L-Type Tube Fitting (for Pump) P100 水药对接件药箱位置 L型转接头				
5	02-001-08110	P100 Application System Cable Organizer P100 负载连接线接头卡件		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
6	14-005-00003	P40,V40CN,V40EN,P100 Liquid Container Lid P40,V40CN,V40EN,P100 药箱盖				
7	02-001-05108	P40,V40CN,V40EN,P100 Liquid Container Inlet Filter P40,V40CN,V40EN,P100 药箱盖滤网				
8	02-001-08413	P100 Application System Landing Skid Clamp P100 负载框脚架固定件				
9	01-027-02271	P100 Spraying System Main Harness P100 负载集线板睿喷连接线		02-004-00523	M2.5*8*4.5 Screw Kit M2.5*8*4.5内六角圆柱头三组合耐落螺丝	4
10	02-002-10428	P100 Landing Skid (for Liquid Container, Left) P100 药箱左脚架				
11	02-001-08049	P100 Landing Skid Bottom Rod Bracket Clamp P100 药箱脚架外侧固定件		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合耐落螺丝	4
12	02-001-08384	P100 Application System Cable Hub Harness Port Seal P100 负载集线板SR圆形防水O圈				
13	02-001-08070	P100 Application System Cable Hub Upper Case P100 负载集线板上盖		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2
14	05-002-01310	P100 Application System Cable Hub Board P100 负载集线板PCBA		02-004-00889	ST2.9*5 Tapping Screw ST2.9X5PB内六角圆柱头自攻螺丝	2
15	02-001-08111	P100 Application System Cable Hub Case Seal P100 负载集线板防水橡胶圈				
16	02-001-08071	P100 Application System Cable Hub Lower Case P100 负载集线板下盖		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	6
17	14-004-00015	P40,V40CN,V40EN,P100 Peristaltic Pump Tube Kit P40,V40CN,V40EN,P100 蠕动泵管套件				
18	14-005-00030	P100 Shout Liquid Tube (Liquid Container Bottom Outlet - Pump) P100 药箱分流管				
19	05-002-01384	P100 Peristaltic Pump (Type B) P100 蠕动泵B		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合耐落螺丝	1
20	02-001-06593	P100 Liquid Container Bottom Outlet Tube Fitting Seal P100 药箱分流管密封胶圈				
21	02-001-06717	P40,V40CN,V40EN,P100 Liquid Container Bottom Outlet Tube Fitting Nut P40,V40CN,V40EN,P100 药箱宝塔头盖				
22	02-001-06861	P100 Liquid Container Level Detector Float P100 药箱浮子				
23	02-002-10027	P100 Landing Skid Bottom Rod P100 药箱底部支撑杆				

			24	02-001-08286	P100 Landing Skid Bottom Rod Rubber Buffer P100 药箱防震胶垫					
			25	02-001-08313	P100 Pump Bracket P100 蠕动泵固定件					
			26	02-001-07979	P100 Landing Skid Bottom Rod Bracket P100 药箱脚架内侧固定件					
			27	02-001-06639	P40,V40CN,V40EN,P100 Liquid Container Level Detector Seal P40,V40CN,V40EN,P100 药箱传感器密封胶圈					
			28	05-002-01379	P100 Liquid Container Level Detector P100 药箱传感器					
			29	14-005-00007	P100 Liquid Container Bottom Outlet 2-Way Tube Fitting Kit (incl. filter) P100 药箱嘴套件					
			30	05-002-01383	P100 Peristaltic Pump (Type A) P100 蠕动泵A		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	1	
			31	02-002-10427	P100 Landing Skid (for Liquid Container, Right) P100 药箱右脚架					
			32	02-001-08394	P100 Liquid Container P100 药箱箱体					
			35	02-001-08241	P100 Application System Cable Organizer (Patch-Type) P100 负载柜线束固定件		02-004-00918	ST4.2*8 Tapping Screw ST4.2*8 PB内六角平圆头自攻螺丝	2	
			36	14-005-00075	P100 Liquid Tube (for Arms) P100 3、4号机臂药液传输管					
		Sprayer arm 3/4 3/4号机臂	1	05-002-01382	P100 Nozzle P100 集成喷头		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合前落螺丝	4	
			2	02-001-08023	P40,V40CN,V40EN,P100 Nozzle Disc P40,V40CN,V40EN,P100 喷嘴盘		02-004-00937	M3*8*6 Screw Kit M3*8六角圆柱头三组合前落螺丝	1	
			3	05-002-01528	V40EN,P100 Solenoid Valve V40EN,P100 电磁阀					
			4	14-005-00009	V40EN,P100 Short Liquid Tube (Solenoid Valve - Nozzle) V40EN,P100 喷头-截流阀传输管					
			5	14-005-00076	V40EN,P100 Short Liquid Tube (Solenoid Valve - L-Type Tube Fitting) V40EN,P100 截流阀-喷头弯管传输管					
			6	01-027-02383	P100 Nozzle & Solenoid Valve Extension Cable P100 喷洒线					
		Fuselage 喷嘴/播系统 机身	1	14-005-00034	P100 Central Cable Hub P100 中心舱集线板		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			2	01-027-02338	P100 Application System Main Connect Cable P100 负载线					
			3	14-005-00024	P100 Central Power Busbar (incl. Seal) P100 汇流板 (含O型圈)		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合前落螺丝	4	
		Power system arm 1 动力系统 1号机臂	1	14-005-00104	47" Foldable Propeller Upper Clamp Kit (CW) 47英寸折叠桨上桨夹-CW组件		02-004-00884	M6*16*12 Screw Kit M6*16内六角圆柱头三组合螺丝	4	
			2	14-005-00100	47" Foldable Propeller Blades Kit (for P100, CW) 47英寸CW桨叶 (LY)					
			3	02-001-08208	Ø35*1.5 Rubber Gasket 47寸桨Ø35橡胶垫片					
			4	02-001-08207	Ø35*2 POM Gasket 47寸桨Ø35垫片					
			5	14-005-00106	47" Foldable Propeller Lower Clamp Kit (for P100, CW) 47英寸折叠桨下桨夹-CW组件 (P100)					
			6	05-002-01340	P100 ESC P100 电调		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合前落螺丝	2	
			7	02-005-00317	P100 Motor P100 动力电机		02-004-00835	M4*14*8 Screw Kit M4*14*8六角圆柱头三组合前落螺丝	4	
			8	02-001-08206	Ø38*2.9 POM Gasket (for P100) 47寸桨Ø38垫片					
			9	02-001-08414	Ø14 Bushing (for P100, CW Props) 47英寸折叠桨CW防磨套					
		Power system arm 动力系统 2号机臂	1	14-005-00105	47" Foldable Propeller Upper Clamp Kit (CCW) 47英寸折叠桨上桨夹-CCW组件					
			2	14-005-00101	47" Foldable Propeller Blades Kit (for P100, CCW) 47英寸CCW桨叶 (LY)		02-004-00884	M6*16*12 Screw Kit M6*16内六角圆柱头三组合螺丝	4	
			3	02-001-08415	Ø15 Bushing (for P100, CCW Props) 47英寸折叠桨CCW防磨套					
			4	05-002-01340	P100 ESC P100 电调		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合前落螺丝	2	
			5	02-001-08206	Ø38*2.9 POM Gasket (for P100) 47寸桨Ø38垫片					
			6	05-002-01340	P100 ESC P100 电调		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合前落螺丝	2	
			7	14-005-00107	47" Foldable Propeller Lower Clamp Kit (for P100, CCW) 47英寸折叠桨下桨夹-CCW组件 (P100)		02-004-00835	M4*14*8 Screw Kit M4*14*8六角圆柱头三组合前落螺丝	4	
			8	02-001-08207	Ø35*2 POM Gasket 47寸桨Ø35垫片					
			9	02-001-08208	Ø35*1.5 Rubber Gasket 47寸桨Ø35橡胶垫片					
		Power system arm 3 动力系统	1	14-005-00100	47" Foldable Propeller Blades Kit (for P100, CW) 47英寸CW桨叶 (LY)		02-004-00884	M6*16*12 Screw Kit M6*16内六角圆柱头三组合螺丝	4	
			2	02-001-08208	Ø35*1.5 Rubber Gasket 47寸桨Ø35橡胶垫片					
			3	02-001-08207	Ø35*2 POM Gasket 47寸桨Ø35垫片					
			4	14-005-00107	47" Foldable Propeller Lower Clamp Kit (for P100, CCW) 47英寸折叠桨下桨夹-CCW组件 (P100)					
			5	02-005-00317	P100 Motor P100 动力电机					

		3号机臂 3 Propeller	6	05-002-01340	P100 ESC P100 电调		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合耐落螺丝	2	
							02-004-00835	M4*14*8 Screw Kit M4*14*8六角圆柱头三组合耐落螺丝	4	
			7	02-001-08206	Ø38*2.9 POM Gasket (for P100) 47寸桨Ø38垫片					
			8	02-001-08414	Ø14 Bushing (for P100, CW Props) 47寸折叠桨CW防磨套					
			9	14-005-00105	47" Foldable Propeller Upper Clamp Kit (CCW) 47寸折叠桨上桨夹 -CCW组件					
		Power system arm4 动力系统 4号机臂	1	02-001-08208	Ø35*1.5 Rubber Gasket 47寸桨Ø35橡胶垫片		02-004-00978	M4*18*8 Screw Kit M4x18 内六角圆柱头三组合螺丝	3	
			2	02-001-08414	Ø14 Bushing (for P100, CW Props) 47寸折叠桨CW防磨套					
			3	02-001-08207	Ø35*2 POM Gasket 47寸桨Ø35垫片					
			4	14-005-00107	47" Foldable Propeller Lower Clamp Kit (for P100, CCW) 47寸折叠桨下桨夹 -CCW组件 (P100)					
			5	02-005-00317	P100 Motor P100 动力电机					
								02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合耐落螺丝	2
								02-004-00835	M4*14*8 Screw Kit M4*14*8六角圆柱头三组合耐落螺丝	4
7	02-001-08206	Ø38*2.9 POM Gasket (for P100) 47寸桨Ø38垫片								
8	14-005-00101	47" Foldable Propeller Blades Kit (for P100, CCW) 47英寸CCW桨叶 (LY)		02-004-00884	M6*16*12 Screw Kit M6*16内六角圆柱头三组合螺丝	4				
9	14-005-00105	47" Foldable Propeller Upper Clamp Kit (CCW) 47寸折叠桨上桨夹 -CCW组件								
		Power system Fuselage 动力系统 机身	1	14-005-00034	P100 Central Cable Hub P100 中心舱集线板		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			2	14-005-00027	P100 Battery Socket P100 电池尾插		02-004-00836	M4*16*8 Screw Kit M4*16*8六角圆柱头三组合耐落螺丝	2	
			3	02-002-09974	P100 Main Power Cord Connector Isolator P100 汇流板螺钉绝缘套					
			4	14-005-00024	P100 Central Power Busbar (incl. Seal) P100 汇流板 (含O型圈)		02-004-00833	M4*10*8 Screw Kit M4*10*8六角圆柱头三组合耐落螺丝	4	
		Fuselage front compartment 飞控及感知系统头部	1	05-002-01265	P100 Terrain Module P100 地形模块		02-004-00523	M2.5*8*4.5 Screw Kit M2.5*8*4.5内六角圆柱头三组合耐落螺丝	3	
			2	05-002-01262	P100 UPS Module P100 UPS备用电池		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			3	05-002-01531	SuperX4 Pro Flight Controller (Chinese Version) SuperX4 Pro 中国版飞控					
				05-002-01590	P100 SuperX4 Pro Flight Controller (International Version) P100 SuperX4 Pro 海外版飞控					
			4	05-002-01396	P100 4D Imaging Radar (Dynamic Radar)(Chinese Version) P100 中国版雷达					
				05-002-01589	P100 4D Imaging Radar (Dynamic Radar)(International Version) P100 海外版雷达					
			5	05-002-01349	P100 FPV Camera P100 FPV相机		02-004-00624	M3*10*6 Screw Kit M3*10*6六角圆柱头三组合耐落螺丝	2	
		Fuselage 飞控及感知系统中部	1	01-003-00340	P100 RTK Antenna (Right) P100 RTK天线-R		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			2	01-003-00345	P100 Radio Antenna (Right) P100 WiFi天线-R		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			3	01-003-00358	P100 4G Antenna P100 4G天线					
			4	01-003-00339	P100 RTK Antenna (Left) P100 RTK天线-L		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	
			5	01-003-00346	P100 Radio Antenna (Left) P100 WiFi天线-L		02-004-00903	ST2.9*8 Tapping Screw ST2.9*8 PB内六角平圆头自攻螺丝	4	